



File Name: casio cassiopeia it-600 manual.pdf

Size: 3471 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 10 May 2019, 21:12 PM

Rating: 4.6/5 from 681 votes.

Status: AVAILABLE

Last checked: 10 Minutes ago!

In order to read or download casio cassiopeia it-600 manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with casio cassiopeia it-600 manual . To get started finding casio cassiopeia it-600 manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

casio cassiopeia it-600 manual

After reading this guide, keep it in a safe place for future reference. Be sure to read the following Safety Precautions before trying to use it for the first time. Markings and Symbols The following are the meanings of the markings and symbols used in these Safety Precautions. This symbol indicates information that, if ignored or applied Danger incorrectly, creates the danger of death or serious personal injury. This symbol indicates information that, if ignored or applied incorrectly, crContinued use creates the danger of Do not place heavy objects on the power cord and keep it away from sources of heat. Doing so can cause data to be lost. Dead batterThe information described above dates from January 2003 and may be subjected to future changes. E37 IT600 Specifications. E38 USB Cradle HAD60IO. Open the box and make sure that all the items shown here are included. You may have to register before you can post click the register link above to proceed. To start viewing messages, select the forum that you want to visit from the selection below. UserFriendly Manuals. Product Instructions. Thank you for purchasing the CASSIOPEIA RuggedRead this Manual in its entirety before handling or operating the product, and keep it close at hand so itPage 1AC cord plug and wall outlet illustrated in this Users Manual showsIt may not be the same shape of AC cordRugged PDA AC adaptor has an automatic voltage switching circuit. PDA under AC power virtually anywhere in the world without havingNote, however, that AC cord plug shapeMake sure that the AC cord youPage 1A list of the itemsConfirm that nothing is missing orIf anything is missing or damaged, contact the dealer from which you purchased this product. Us. Ma ersCompanionDo not dispose of the box and packing materials. Use the box and packing materials for storage and transport. Page 1UsCompanion. You can find more detailed information in the <http://phantasos.org/userfiles/bukh-steyr-manual.xml>

- **casio cassiopeia it-600 manual, casio cassiopeia it-600 manual download, casio cassiopeia it-600 manual pdf, casio cassiopeia it-600 manual free, casio cassiopeia it-600 manual online.**

Users Guide; an online manual you can accessThe manuals included with your Rugged PDA contain useful information depending on what you want to do. Users Manual. This is the Users Manual. This manual includes safety precautions andBe sure to read this manual before operating the Rugged PDA. Users Guide. The Users Guide is a PDF file on the CASIO Companion CD. The Users. Guide explains the various useful programs available with the Rugged PDA. About the icons. The following icons are used in this manual. This mark indicates important cautions and things to. ImportantThis mark indicates that you need to memorize. Page 2An amendment or addendum to this EULA may accompany the Product. You do not have the right to distributeProduct, provided the copy contains all of the original Software ProductsCASIO reserves all rights not expressly grantedCASIO software or software provided under public license by third partiesUse of the Freeware by you shall beAfter upgrading, you may no longer use theCASIO provides other terms along with the update or supplement. Any transfer mustThe transfer may not be anPrior to the transfer, the end userYou may not sublicense, assign or transfer the license or Software. Product except as expressly provided in this EULA. Software Product and user documentation are owned by CASIO or itsYou shall not remove any productProduct. CASIO and its suppliers retain all rights not expressly granted. This EULA will also terminate upon conditions set forth elsewhere in this. EULA or if you fail to comply with any term or condition of this EULA. You agree upon such termination to destroy the Software Product togetherCASIO agrees not toDocumentation, and Technical Date for Commercial Items are licensed toTo the extent the terms of any. CASIO policies or programs for support services conflict with the

terms of Page 3 Those installed software products of MS origin, The SOFTWARE is licensed, not sold.
All rights reserved. SYSTEM
Software. <https://datatray.com/userfiles/buku-manual-canon-eos-450d.xml>

You may use the Pocket PC 2003 Software as installed on the Rugged PDA. For other software components contained in the Desktop Software, you may install and use such components only in accordance. In the absence of Neither Manufacturer nor its suppliers shall be liable for any damages. Limitations on Reverse Engineering, Decompilation and Disassembly. You may not reverse engineer, decompile, or Single Device. The Pocket PC 2003 Software is licensed with the Rugged PDA as a single integrated product. The Rugged PDA. Even if you receive multiple Rental. You may not rent or lease the SOFTWARE. Software Transfer. You may permanently transfer all of your rights under this EULA only as part of sale or transfer of the Rugged PDA, provided you retain no copies, you transfer all of the SOFTWARE including all component parts, the Of the SOFTWARE is an upgrade, any transfer must include all Termination. Without prejudice to any other rights, Manufacturer or MS may terminate this EULA if you fail to comply. In such event, you must destroy all copies of the SOFTWARE and all of its Page 4 Desktop Software. If any Desktop Software Components is provided by the Manufacturer separate from the Rugged You may not copy the printed materials accompanying the SOFTWARE. All title and intellectual property rights in This EULA grants All rights not specifically granted under this EULA are reserved by MS and its suppliers. You specifically agree not to export or reexport the SOFTWARE i to any Java technology is not Corporation, or their affiliates or subsidiaries. For product support, please refer to the CASIO support number provided in Should you have any questions concerning this EULA, or if you desire to contact. CASIO for any other reason, please refer to the address provided in the documentation for the Rugged PDA. After reading this guide, keep it close at hand for easy reference. Please keep all informations for future reference. To obtain a new User's Manual, contact the About the icons.

In this Manual various icons are used to highlight safe operation of Warning! Indicates that there is a risk of severe injury or death if used incorrectly. Caution! Indicates that injury or damage may result if used incorrectly. Icon examples. To bring attention to risks and possible damage, the following types The symbol indicates that it includes The symbol indicates a prohibited The symbol indicates that a restriction. In this symbol the type of actual restriction removal of the power plug from an Page 6 Handling Rugged PDA The effects of electromagnetic radiation may Continued use creates Continued use creates Use of Rugged. PDA in such an area creates the danger of Rugged PDA create the danger of fire and Page 7 Continued use creates the danger of shorting, fire Never touch it or allow it to get in your mouth. Continued use creates the danger of electric Power Plug and AC Adaptor. AC cord plug and wall outlet illustrated in this Users Manual It may not be the same shape of. AC cord plug used in your area. Note Overloading an electric outlet creates the danger of overheating and fire. Page 8 AC adaptor while it is on or place the Rugged. PDA on heated flooring or near other heating Doing so might cause it to deform, or result in Loose plugs Never connect to a power outlet that is loose. Specified. AC Adaptor. Page 9 Battery Pack Rugged PDA. When the battery pack reaches Other types of Doing so creates the danger of overheating, fire, and bursting of the Doing so creates the danger of fire and explosion. Rugged PDAPDA to fall, creating the danger of malfunction, fire, and electric shock. The above conditions can cause malfunction The stylus or other sharp object may cause Such conditions can Power Cord and Peripherals Doing so creates the danger of electric shock. Pulling on the cord can damage it, break the Doing so can Repair and maintenance are subject to the terms and conditions The misoperation of electronic product may create a risk of injury To avoid the accident, be Follow the cautions.

The cautions for Rugged PDA are described on pages from 6 to Contact your original retailer or authorized distributor. If Rugged PDA works abnormally. If Rugged PDA malfunctions, or emits smoke, strange odor or noise, Contact your original retailer or authorized distributor. Users

Manual. Application It is not designed, Such a device can corrupt data in Rugged PDA. The heating value charges according Contact your original retailer or authorized distributor. Do not continue operating the Rugged PDA until the battery is completely depleted. Recharge the battery Use the stylus provided. Remove any dust or dirt from the Dirt or dust makes Avoid using the Rugged PDA in the following locations. Avoid vibration and strong impact. Do not use the Rugged PDA in the rain or places where Then, move Rugged PDA separately from We recommend periodically writing down or transferring data transfer data with. ActiveSync to a personal computer to create a backup of important data. Data NonCASIO options Use Only as Directed PDA, which can required extensive repair work to correct. Transferring ownership selling this product should be done in compliance with Accepting ownership buying this product should be done in compliance with When transferring ownership of this device to a third party, hand over everything that was included with it including CDROMs, manuals, ENDUSER. LICENSE AGREEMENT, and any backup copies and completely dispose of To accept ownership of this device, you must accept the ENDUSER LICENSE AGREEMENT for the software. Accepting ownership of this device is considered acceptance of the ENDUSER LICENSE AGREEMENT. When disposing of or transferring ownership of this device, erase all important If you do not erase all the data before disposing of or transferring ownership of When it comes time to dispose of your Rugged PDA, do so in Contact your The product that you have purchased contains a rechargeable battery. The battery is recyclable.

Affix tape to the battery contacts before At the end of its useful life, under various state and Dispose of used batteries according to the manufactures instructions. Care. Shut down the power and unplug the power Rugged PDA. Cleaning Rugged PDA with If Rugged PDA is very Wring out all excess of moisture before wiping. Before using the stylus, remove any dirt from Dirt if any may make an input with the stylus Also take care that you do not misplace A dirty screen can interfere with response to stylus operations, and smooth The screen is easily scratched, so take care that you Never remove Rugged PDAs outer cover In the following instances, immediately shut down the power, remove the battery Never try to make any adjustments except as specifically instructed by this Users. Manual. Improper adjustment or modification of Rugged PDA can permanently Never attempt to repair or modify this unit in any way. Follow the procedure below to put the Rugged PDA into storage. Note. If you have used the Rugged PDA for a long period, it will You can find information about cleaning Consumables. The following items are consumables. You will need to inform your original dealer or authorized distributor of the Pack Packing List. 1. Finding Information. 2. Safety Precautions. 6. Before Using Rugged PDA. 13. Maintenance and Care. 17. Storage. 18. Consumables. 18. Getting Ready. Names of Parts Their Functions. 22. Operating the Rugged PDA. 25. Using the Stylus. 25. Connecting the strap. 27. Attaching the Screen Protect Sheet. 27. Power Supply. 29. Battery Pack. 29. Attaching and Removing the Battery Pack. 30. Charging the Battery Pack. 32. Using the AC Adaptor. 35. Initial Setup. 36. Initial setup procedure. 36. Various Screen Adjustments. 38. Button Operation Settings. 39. When Initial Setup Is Finished. 40. Connecting to a Computer. 51. Compatible computers. 51. Connecting to a Computer. 52. Using the CASIO Companion CD. 52. Appendix. Specifications. 54. Options List. 56 Names of Parts and Their Functions.

Front Right side Flashes green when the CF card or SD memory card is Left side When the AC adaptor or Basic Cradle is attached, it lights The LCD screen displays information and the stylus can be used to Moves the cursor and similar items up, down, left and right on the Sounds such as the alarm come out of the speaker. Sound does not Pushing the program buttons starts the program assigned to that Direct your voice here when recording on the Pocket Word or Memo Used for date communications by the IrDA interface. This is the cover for the battery pack. Be sure to keep the battery Moves the cursor and similar items up and down on the computer Operates as the Enter key on the computer. Also, it has several functions when the 5 way cursor button. This switch resets the computer, similar to turning off and on the Remove the rubber cover to use it. You can attach a

commercially available hand strap. Use the eject button to remove CF compact flash cards. You can insert either one SD memory card or one multimedia card. You can insert one CF card. The stylus pen is stored here. Use this pen for entering items on the touch panel screen. You can attach a commercially available hand strap. This is the cover for the battery pack. Be sure to keep the lock switch locked. Locking the lock switch Used for data communications by the IrDA interface. Remove the rubber cover and store it before use. Use to connect the Basic Cradle and the battery pack. Remove the rubber cover to use it. Operating the Rugged PDA. About buttons on the side. The buttons on the side of the Rugged PDA can be used for the following operations. Pressing Operates as the Enter key on the computer. For example, press the Action button to Pressing the Moves the cursor and similar items up and For example, to scroll the screen down, press Entering data and most other operations on the Rugged PDA are done To use the stylus, remove it from the holder and use it the same way as Stylus operations.

Your device has hardware buttons that control actions and scroll functions, and a stylus for selecting items and entering information. Tap. Touch the screen once with the Tap and hold Tap and hold the stylus on an item Drag. Hold. Hold the stylus on the screen and It is possible to attach a commercially available hand strap. Attaching the Screen Protect Sheet. Follow the procedure below to attach the screen protect sheet No. Doing so may break the screen. Using the Rugged PDA while The Rugged PDA uses an AC adaptor to connect to an outside power source Attach the battery pack and charge the Rugged PDA's battery until it is full to do the initial setup when using it for the first time Caution! Use the battery pack provided or a battery pack Using a battery Battery pack. The Rugged PDF operates on a battery pack lithium ion battery as its Note the following points when using Immediately recharge or replace the battery depending on which message is displayed. Casio bears no responsibility for lost data if the battery is not recharged or replaced correctly. The user is expected to acknowledge this before the fact. Data in the memory may be lost if the main battery is changed at Important Refer to Help for Active Sync Attaching Next, reattach the battery pack cover, and slide the lock switch Be sure to slide the battery pack cover lock switch to the LOCK position. If it is not attached correctly, it may fall out The internal backup battery can maintain the data in the If the backup battery is The AC adaptor is used not only to supply power from the AC power The battery pack is also PDA unit. Important If this happens, you need to buy a Note. The internal backup battery and the battery pack main battery have absolutely no charge at time of purchase. Fully charge Pull back the rubber cover from the AC adaptor jack and insert the Warning! Use the AC adaptor specified by the manufacture.

Using the AC adaptor that is not specified If the left side indicator LED goes out during charging, then the internal If this happens, remove the AC adaptor and the battery pack from the Rugged PDA and If this happens frequently it may indicate a malfunction, contact your original Note Rugged PDA is not being used. The battery may lose all power if the Rugged PDA is stored for a long period of time. We recommend Tap the Status Icon. Important The battery attached to the Rugged PDA charges when the AC adaptor is attached. Besides charging the battery, we recommend attaching the Rugged PDA to the AC adaptor when doing operations that Warning! Using the AC adaptor that is not specified Important Initial setup procedure. The first time you use the Rugged PDA, fully charge the battery if Doing initial setup Use the stylus to tap the Do the following adjustments, if after initial setup the screen is difficult Adjusting screen brightness. You can adjust the screen brightness with the Action button and the Cursor button to make the screen easier to see when operating the Rugged PDA in dark locations. Pressing the Action button and the Up Adjusting the screen. You can adjust the screen if it is not responsive or if the position you Press the power button and the Action button at the same time to The target moves each time Note. Screen orientation. You can change the screen to one of three orientations vertical, horizontal righthanded, horizontal lefthanded for easier operation. Pushing the Program button on the front of the Rugged PDA while it is Program button is accidentally pressed when the Rugged PDA is in Note This enables the This section describes the

Rugged PDAs basic operations after initial Today Screen. When you turn on your device for the first time each day or after 4 You can also display On the Today screen, you can see at Following are some of the status icons you may see. Meaning. Turns all sounds on and off. Backup battery is low. Main batteries are charging. Main batteries are low.

Main batteries are very low. Main batteries are full. Notification that one or more instant messages Notification that one or more email messages Note. If more notification icons need to be displayed than there is Tap the icon to view all notification icons. Programs. You can switch from one program to another by selecting it from the You can also switch to some programs by pressing a program button. Your device has one or more program buttons located on the front or Note. Some programs have abbreviated labels for check boxes and Drag the stylus off Additional applications can be Icon. Program. Description. ActiveSync. Synchronize information between your Calculator. Perform basic arithmetic and computations. Calendar. Keep track of your appointments and Contacts. Keep track of your friends and colleagues. Inbox. Send and receive email messages. MSN Messenger. Send and receive instant messages with Notes. Create handwritten or typed notes, Pictures. Manage and manipulate image files. Pocket Excel. Create new workbooks or view and edit. Excel workbooks created on your desktop computer. Pocket Internet. Explorer. Browse Web and WAP sites, and download new programs and files from the. Internet. Pocket Word. Create new documents or view and edit. Word documents created on your desktop computer. Tasks. Keep track of your tasks. Terminal Services. Client. Remotely access files and information. Windows Media. Player 9. Playback multimedia content videos The navigation bar is located at the top of the screen. It displays the Use the command bar at the bottom of the screen to perform tasks in Input Panel button. To create a new item in the current program, tap. New. To see the name of a button, tap and hold the stylus on the With popup menus, you can quickly choose an action for an item. For The actions in the popup menus vary from program to program. To access a popup menu, tap and hold the stylus Or tap anywhere outside the menu to close the menu without performing an action. Notifications.

Your device reminds you in a variety of ways when you have something to do. For example, if you've set up an appointment in Calendar, To choose reminder types and sounds for your device, tap The options you choose here apply throughout the device. You have several options for entering new information For more information on. ActiveSync, see ActiveSync Help on your desktop computer. Entering Text Using the Input Panel. Use the input panel to enter information in any program on your device. You can either type using the soft keyboard or write using Letter. Recognizer, Block Recognizer, or Transcriber. In either case, the characters appear as typed text on the screen. To show or hide the input panel, tap the Input Panel button. Tap the To type with the soft keyboard The soft keyboard can be used in two modes large and small. Large This looks much like a standard QWERTY keyboard found on Here is the large keyboard without gestures enabled. Notice the absence of numerical keys. Finally, here is large keyboard with gestures enabled. With Letter Recognizer you can write letters using the stylus just as Recognizer. As you can see, the screen has been broken into three segments. The first allows you to enter uppercase letters; the second lowercase This is done to increase accuracy of Click on the This is the resulting panel. Foreign characters as well as general purpose special characters are included. Tap the When you write a letter, it is converted to typed text that appears on In any program that accepts writing, such as the Notes program, Write the way you do on To write on the screen. This action displays Note. Some programs that accept writing may not have the Pen button. See the documentation for that program to find out how to To select writing. If you want to edit or format writing, you must select it first. You can cut, copy, and paste written text in the same way you work Drawing on the Screen.

You can draw on the screen in the same way that you write on the For example, selected drawings can be resized, while writing cannot. To create a drawing. A drawing box appears. Subsequent

strokes in or touching the drawing box become part of Note. You may want to change the zoom level so that you can more Tap Tools and then a Connecting to a computer allows you to share data with the computer, transfer files to and from the computer and back up files to the computer. Compatible computers. Computers must meet the following minimum conditions to connect to The following conditions Minimum operating system requirements USB port Windows 98, Windows 2000, Windows Me or Windows. XP only. Infrared communication port if using infrared connection. CDROM drive Keyboard. Microsoft Mouse or compatible pointing device. Windows XP, Windows 2000, Windows Me, Windows 98 options. Note PDA with a computer. Do not connect the Rugged PDA to the computer before installing. The Rugged PDA and the computer can be connected in the following way. Cradle, connect the optional Basic Cradle or Bridge Satellite Cradle Rugged PDA in the optional cradle. Leaving the Rugged PDA connected to the computer via the optional Basic Cradle or Bridge Satellite Cradle makes it easy to connect the Rugged PDA to the computer whenever it is necessary. Note For more information refer to Help Using the CASIO Companion CD. The Companion CDROM contains software and the Users Guide. Put the CDROM into the CD drive of the computer and it will start From the menu screen, you can Follow the procedure below to access information on the Companion To use the Companion CDROM, you must agree to the ENDUSER LICENSE AGREEMENT. Read the ENDUSER LICENSE AGREEMENT and agree with it before using the Companion Adobe Acrobat Reader hereafter Acrobat Reader is necessary to Item Memory. Bluetooth. Wireless LAN ROM 48MB Flash memory Ver.2 Communication speed 1Mbps, 3dbm max. Communication distance Approximately 10m. IEEE802.11b Standard.

Wireless frequency Transfer rate 11Mbps max. Transmission distance Standard external interfaces. Infrared. Communication distance 30cm max. CF card. SD card. Basic Cradle. Connect to Basic Cradle to supply power to Rugged Compatible with 3.5 mm diameter mini stereo plug. Bridge Satellite Cradle or RS232C cable connection, Speaker. Monaural. Microphone. Power consumption. Specifications. Lithium ion battery 2300mAh removable. Operating time. Charging time. Approximately 4 hours inhouse standard. NiMH battery builtin Wight Dimensions Operating environment Temperature 540 Humidity 3080% Also, some dots on the screen do not light or stay continually lit. These, The battery operating time was measured using JEITA compliant battery operating time measurement methods under the following conditions The useful options shown below are available for use with the Rugged PDA. AC Adaptor ADS15050A. Basic Cradle HAC60IO. AC adapter ADS15050AE to use. Battery Pack HAC21BAT. Bridge Satellite Cradle HAC61IO GER ttery. DANe of the toba heatry Screen Protect Sheet Bridge Satellite Cradle to use. Communication Card Cover CASIO Europe GmbH. Bornbarch 10, D22848 Norderstedt, Germany CASIO Europe GmbH. Bornbarch 10, D22848 Norderstedt, Germany Pocket PC, Models IT10M20, IT10M20BR Council Directives. Standards; These limits are designed to This equipment generates, uses and can radiate radio frequency energy and, However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful Declaration of Conformity. Model Number. Trade Name. Responsible party. Address. Telephone number Operation is subject to the Industry Canada Industrie Canada Shibuyaku, Tokyo 1518543, Japan. Notes However, if any unclear portions or omissions are Descriptions and specifications furnished herein the User's Manual by CASIO. Computer Co., Ltd. are believed to be accurate and reliable. However, CASIO CASIO does not assume any Shibuyaku, Tokyo 1518543, Japan.

Page 1 Operation is subject to the following two conditions To prevent radio interference to the licenced service, this device is Antenna having a higher gain is strictly The required antenna PDF Version 1.5. Linearized No. Encryption Standard V1.2 40bit. User Access Print, Fill forms, Extract, Assemble, Print highres. Page Count 63. XMP Toolkit XMP toolkit 2.9.113, framework 1.6. About uuid7ba04b6e897042f692a292416497a9f4. Producer Acrobat Distiller 5.0.5 for Macintosh. Document ID uuid2e49520cb3294020be3887ea9009fec8. Title IT10 Users manual. Subject. Learn more opens in a new window or tab Read item description or contact seller for postage options. This

amount is subject to change until you make payment. For additional information, see the [Global Shipping Programme terms and conditions](#) opens in a new window or tab This amount is subject to change until you make payment. If you reside in an EU member state besides UK, import VAT on this purchase is not recoverable. For additional information, see the [Global Shipping Programme terms and conditions](#) opens in a new window or tab [Learn More](#) opens in a new window or tab [Learn More](#) opens in a new window or tab [Learn More](#) opens in a new window or tab [Learn More](#) opens in a new window or tab [Learn More](#) opens in a new window or tab [Learn More](#) opens in a new window or tab The item may have some signs of cosmetic wear, but is fully operational and functions as intended. This item may be a floor model or an item that has been returned to the seller after a period of use. See the seller's listing for full details and description of any imperfections. [Contact the seller](#) opens in a new window or tab and request a postage method to your location. Please enter a valid postcode. Please enter a number less than or equal to 1. Sellers may be required to accept returns for items that are not as described. [Learn more about your rights as a buyer.](#)

[opens in a new window or tab](#) You're covered by the eBay Money Back Guarantee if you receive an item that is not as described in the listing. All Rights Reserved. [User Agreement](#), [Privacy](#), [Cookies](#) and [AdChoice](#) Norton Secured powered by Verisign. Please note that we show only a few most popular according to internal statistics products for each of the product groups. If you want to see more guides for a specific group, go to the appropriate category section.